

Honda water pump Single Cylinder Diesel Engine

Ensure all Prestart checks have been carried out (Fuel & Oil)

Engine Will Not Start	
Check Fuel	Ensure tap in ON position
Check fuel type	Check correct fuel
Check STOP/ RUN lever	Set to ON position
Check fuel supply	Check/kinked fuel lines Check fuel filter replace if necessary
Check Decompressor	Check/replace if necessary
Check Air Intake	Check/replace if necessary
Hard to Start Engine	
Low Compression	Worn Engine Components replace as required
Insufficient Cranking speed	In cold greater effort will be required to obtain start condition
Check pull start has enough length	Check length should be in excess of 0.80mtrs Approximately