

## Single Cylinder Diesel Engine

Ensure all Prestart checks have been carried out (Fuel & Oil)

<b>Engine Will Not Start</b>	
<b>Check Fuel</b>	Ensure tap in ON position
<b>Check fuel type</b>	Check correct fuel
<b>Check STOP/ RUN lever</b>	Set to ON position
<b>Check fuel supply</b>	Check for blocked/kinked pipes causing restrictions to flow Check fuel filter is not blocked
<b>Check Decompressor</b>	Check operation/ replace if necessary
<b>Check Air Intake</b>	Check/replace if necessary
<b>Hard to Start Engine</b>	
<b>Low Compression</b>	Worn Engine Components replace as required
<b>Insufficient Cranking speed</b>	In cold greater effort will be required to obtain start condition
<b>Battery condition poor</b>	Recharge Battery